
Installation, operation and maintenance manual for the product PG-743_1.1.2.1 Speed 2 shower tray siphons, Ø 50 mm hole with rubber plugShower tray siphonSPEED

syfon brodzikowy SPEED 2

1. Environmental conditions

Households (bathrooms, laundry rooms, drying rooms, utility rooms), technical rooms not exposed to the continuous action of salt, chlorine, and other corrosive substances.



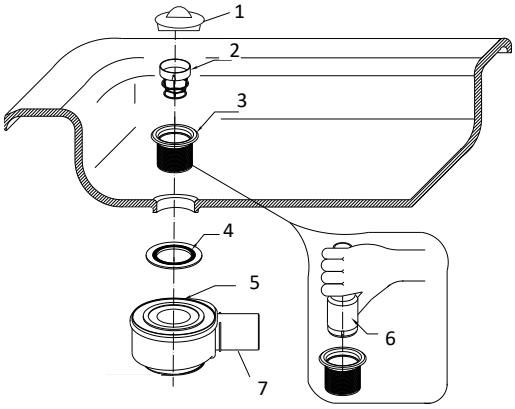

1.PVC plug
2.Sediment trap
3.Sleeve
4.Rubber seal
5.Siphon
6.Wrench
7.Outlet

2. Installation

The siphon fits most commercially available shower trays with a Ø 2" (approx. 50 mm) hole made of acrylic, steel, or composite material. Due to the lack of a standard defining the exact shape of the bottom, some shower trays available on the market may have a bottom profile that does not fit every siphon, including the Speed siphon. This is not a product defect. If you are unable to connect the Speed siphon to the shower tray in accordance with points 2.1 and 2.2, return it to the seller and look for another siphon that fits your shower tray!

2.1 Place the siphon (5) with the seal (4) (grooves facing up) coaxially under the bottom of the shower tray and, using the attached wrench (6), gently screw in the sleeve (3), paying attention to its coaxial positioning. After tightening, the flange of the sleeve should seat in the recess of the shower tray hole, bending relative to it by a maximum of 2 mm. Installation does not require the use of silicone or other sealants. The flange of the sleeve (3) should not protrude above the bottom of the shower tray!

2.2 Place the sediment trap (2) and plug (1) in the installed siphon (5).

2.3 If you have connected the siphon to the shower tray in accordance with points 2.1 and 2.2, it means that our siphon fits your shower tray.

2.4 Connect the siphon outlet (7) (the body rotates 360°) to the fitting leading to the sewage inlet, making sure that it assumes a horizontal position and is not under stress relative to the bottom of the shower tray. Stresses create gaps, which eventually lead to a leak that you may only notice after a few weeks!

2.5 Carefully tighten the sleeve, keeping in mind to maintain its coaxial position, and place the sediment trap back again. Insert the PVC plug (1) into the sleeve; when properly seated, it retains water.

2.6 Perform a leak test of the connections before final installation of the shower tray.

3. Operation

The product features a 40 mm hydraulic odor barrier, which renews itself after each use of the shower tray. If hot water pipes or underfloor heating do not run near the shower tray, an unrenewed barrier should last for 11 days. We recommend that the sediment trap be permanently installed. Thanks to this, long hair will not adhere to the walls of the siphon.

4. Cleaning and maintenance

Chrome-plated or stainless steel surfaces: standard household cleaning agents for such surfaces. Plastic siphon body surfaces: water with dish soap.

The Speed siphon does not require the use of chemical agents such as drain cleaners (e.g., "Kret"), which can damage the seals. To improve flow, we recommend regular rinsing of the sediment trap (once a month) and cleaning the siphon exclusively using a manual plunger (once a quarter). Compliance with our recommendations guarantees many years of product operation.



AKCES SZYBCIEJ NIŻ MYŚLISZ

Manufacturer
Akces sp. z o.o.
Ul. Młyńska 12, 89– 100 Nakło nad Notecią
www.eakces.eu

Publication date: October 21, 2025